


KIO3B AUDIO Board, Rev B1 Rework Instructions

13 August 2015

B Wolbert

Add two jumpers to the KIO3B AUDIO board, rev B, as shown below.

Mark boards "B1" with black indelible marker.

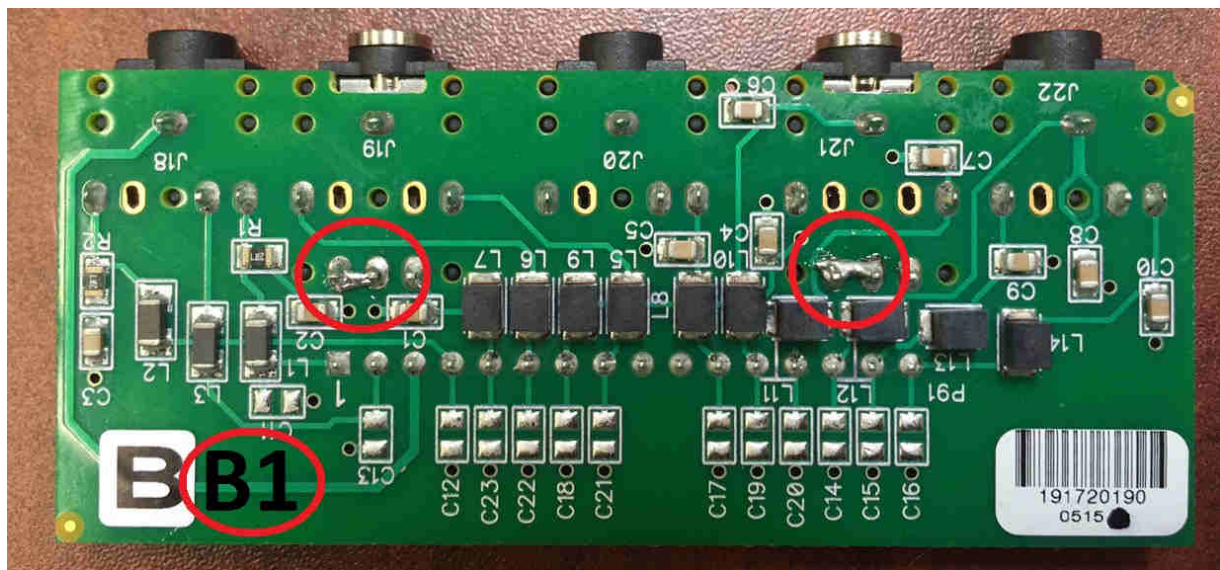

Test procedure: visually inspect the solder jumper at both locations, checking carefully to ensure nothing besides the two pins are shorted together.